


Plug in the Audible Disease Tinnitus TN-1 for instant distorted lo-fi gratification. The Tinnitus takes your signal and makes it sound like its being played through a cheap transistor radio. Low end is eliminated leaving just the high-end grit you can use to induce audio pain. Caution must be used as ringing of the ears is imminent at high volumes.

**Sample Setup:**



simple 'nuf!

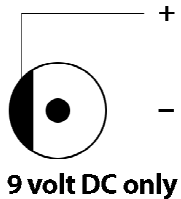

You may power the TN-1 with a standard "Boss" style barrel type power adapter (9 volts DC negative center pin) or with a 9-volt battery. A battery is included but may need replacing after some use. If the battery should cease to function, simply remove the 4 screws on the bottom of the TN-1, remove the base and replace the battery with a fresh one. Unplug the cord from the input jack when not in use for longer battery life.

Contact us at [disease@noisefx.com](mailto:disease@noisefx.com) if you ever have problems with your Tinnitus TN-1. We'll fix it up!

**audible disease  
san francisco USA**